

# Section 1

## Bearings



| Part Number / Description   | Part Image / Technical Drawing |
|---|--------------------------------|
| <p>Bearing Mounting Plate</p> <p><b>MDOO1.71</b><br/>R/H</p> <p><b>MDOO1.72</b><br/>L/H</p> |                                |
| <p><b>MDOO1.73</b></p> <p>Rose Bearing Door Ram</p>   |                                |
| <p><b>MDOO1.74</b></p> <p>Rose Thread Joint</p>   |                                |

### Section 1.7

**West Bromwich**  
0121 524 1200

**Bristol**  
0117 955 4955

**Glasgow**  
0141 429 2704

**London**  
01932 349 396

**Manchester**  
0161 457 9800

**Dublin**  
00353 1899 1060