


# Section 2

## Brushes



Part Number / Description	Part Image / Technical Drawing
---------------------------	--------------------------------

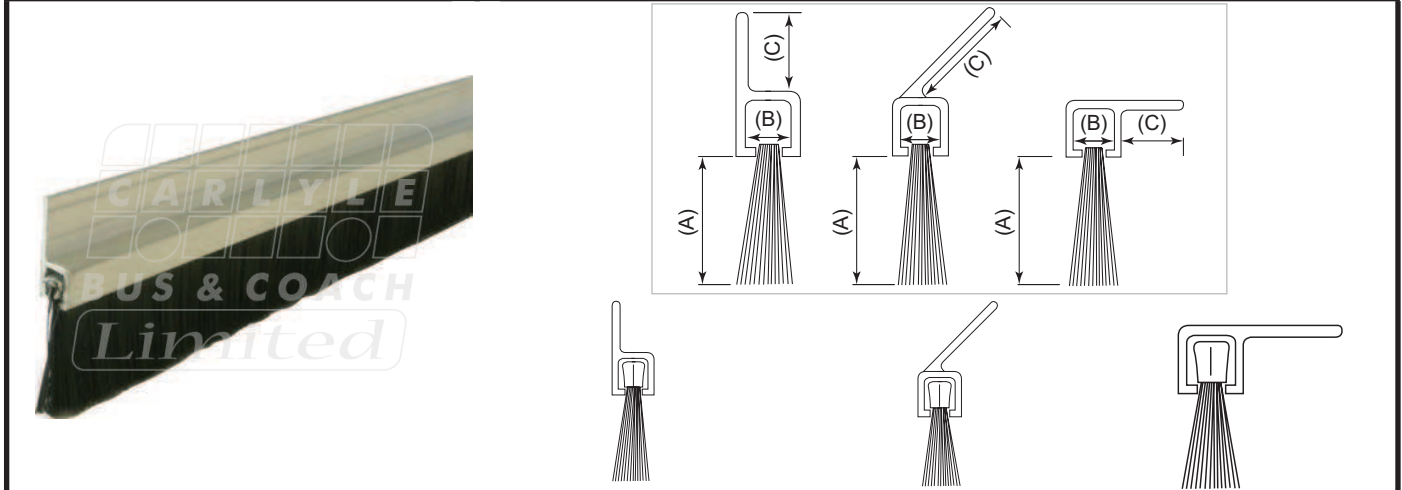

(A)	(B)	(C)	180 Degree	45 Degree	90 Degree
			Part Number	Part Number	Part Number
15	4	10	MDOO2.13	MDOO2.108	MDOO2.123
20	4	10	MDOO2.14	MDOO2.109	MDOO2.124
25	4	10	MDOO2.15	MDOO2.110	MDOO2.125
20	5	15	MDOO2.16	MDOO2.111	MDOO2.126
25	5	15	MDOO2.17	MDOO2.112	MDOO2.127
35	5	15	MDOO2.18	MDOO2.113	MDOO2.128
50	5	15	MDOO2.19	MDOO2.114	MDOO2.129
75	5	15	MDOO2.10	MDOO2.115	MDOO2.130
38	8	20	MDOO2.101	MDOO2.116	MDOO2.131
50	8	20	MDOO2.102	MDOO2.117	MDOO2.132
75	8	20	MDOO2.103	MDOO2.118	MDOO2.133
100	8	20	MDOO2.104	MDOO2.119	MDOO2.134
125	8	20	MDOO2.105	MDOO2.120	MDOO2.135
150	8	20	MDOO2.106	MDOO2.121	MDOO2.136
180	8	20	MDOO2.107	MDOO2.122	MDOO2.137

<p>Front Door Bottom Bush</p> <p><b>MDOO2.11</b> R/H</p> <p><b>MDOO2.12</b> L/H</p>	
---	--

### Section 2.1

**West Bromwich**  
0121 524 1200

**Bristol**  
0117 955 4955

**Glasgow**  
0141 429 2704

**London**  
01932 349 396

**Manchester**  
0161 457 9800

**Dublin**  
00353 1899 1060